

5. Push the side cover forward to disengage the upper tabs, then remove the side cover.
6. Install the side cover by reversing the preceding removal steps.

## FUEL TANK COVER

### Removal/Installation


Refer to **Figure 5**.

1. Park the ATV on level ground and set the parking brake.
2. Remove the seat as described in this chapter.

#### WARNING

*Fuel vapor is present when the fuel tank cap is removed. Because gasoline is extremely flammable and explosive, perform this procedure away from all open flames (including pilot lights) and sparks. Do not smoke or allow someone who is smoking in the work area as an explosion and fire may occur. Always work in a well-ventilated area. Wipe up any spills immediately.*

3. Remove the fuel tank cap and breather tube.


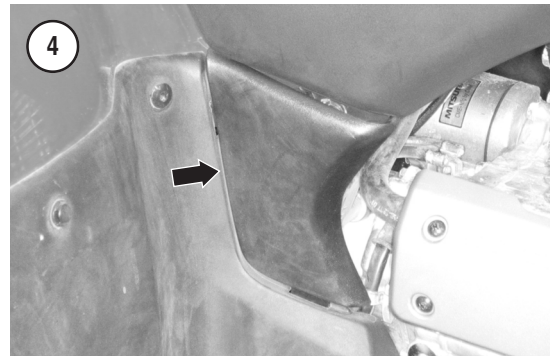


4. Remove the retaining clips securing the fuel tank cover.
5. Move the cover rearward to disengage the retaining tabs (**Figure 7**), then remove the cover.
6. Install the fuel tank cover by reversing the preceding removal steps.

## FRONT CARRIER

### Removal/Installation

1. Park the ATV on level ground and set the parking brake.

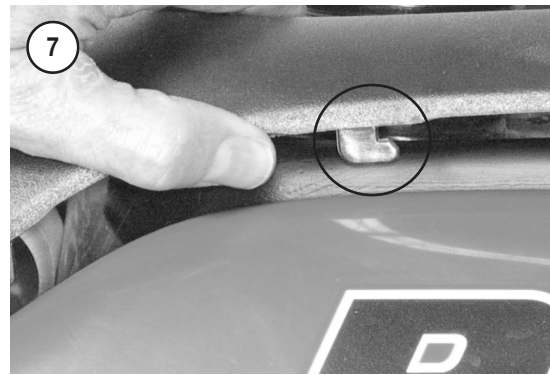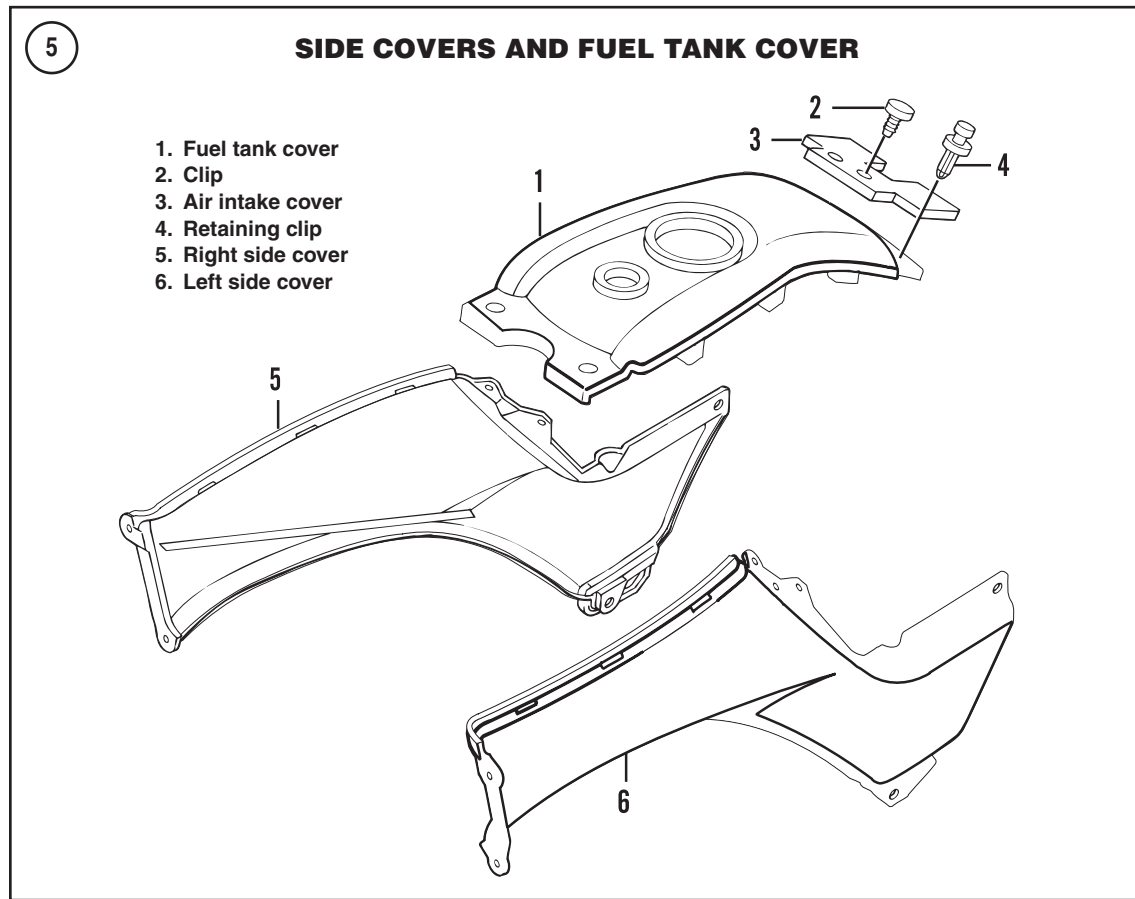

2. On early FE/TE models, remove the straps securing the sub-ICM module to the front carrier strut (Figure 8).
3. Remove the bolts securing the front carrier to the frame and front bumper.
4. Remove the front carrier (A, Figure 9).
5. Install the front cover by reversing the preceding removal steps.

## FRONT BUMPER

### Removal/Installation

1. Park the ATV on level ground and set the parking brake.
2. Remove the front carrier as described in this chapter.

Copyright of Honda TRX350 RANCHER, 2000-2006 is the property of Penton Media, Inc. ("Clymer") and its content may not be copied or emailed to multiple sites or posted to a listserv without the copyright holder's express written permission. However, users may print, download, or email articles for individual use.